



Technical Bulletin

Product: Toshiba CIX Systems

Subject: Time Change Information

Issued By: Operations

Date Issued: November 2009 (Updated)

Date Expires: None

Set Time and Date

Access Sequence: Login to programming mode from your telephone button pad:

1. Hold *##*1*2*3*.
2. At the PASSWORD= prompt, Enter 0000 and press Hold.
3. At the PROG= prompt enter 902 and press Hold.
4. Press FB01 (see page 2 for location) to enter current Strata CIX Date. See table above for format.
5. Press Hold to program.
6. Press FB02 (see page 2 for location) to enter current Strata CIX time. See table above for format.
7. Press Hold to program.
8. Press Hold to submit, then # # Hold to return to the PROG= prompt.
9. Enter another program number to continue programming or press # # Hold again to exit programming mode.
10. Event Trace Control
11. FB Name FB Summary Value LCD Prompt\
12. Date 01
13. Enter current system date in this field.
14. Yymmdd format
15. Yy = current year
16. Mm = current month
17. Dd = current day
18. DATE=
19. Time 02
20. Enter the current time in this field.
21. Hhmmss format
22. Hh = current hour
23. Mm = current minute
24. Ss = current second
25. TIME=

THIS DOCUMENT (INCLUDING ATTACHMENTS) CONTAINS PROPRIETARY AND CONFIDENTIAL INFORMATION, WHICH MAY ALSO BE SUBJECT TO NON-DISCLOSURE AGREEMENT TERMS. ACCORDINGLY, ANY DISCLOSURE OF THIS DOCUMENT OR THE INFORMATION IS PROHIBITED